

# botane

BOTANICAL CASHMERE


You're wearing plants

## THERMAL INSULATION

### Procedure

A 0.4-kg mass of iron and a thermometer probe are inserted into the samples, and the whole is brought to 40°C in a ventilated stove. When the temperature has stabilized, the sample thus prepared is moved to cold storage at a temperature of -19°C, taking the temperature inside and outside the sample (with another thermometer probe) every minute.

COMPARISON : VEGETAL CASHMERE vs CASHMERE

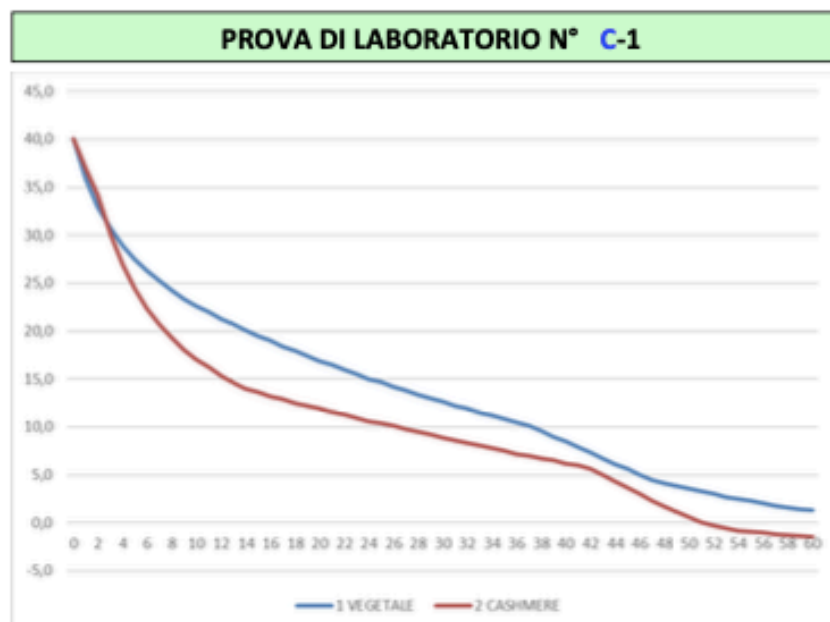

Carpi, 16/12/2022

Il Direttore del Laboratorio

Ing. V. Cianci

